

# BLUESTREAM

## MODEL: BS100B PORTABLE BLUETOOTH SPEAKER

### INSTRUCTION MANUAL





Read these instructions included in this manual thoroughly prior to connecting and operating. Please retain this manual in case you may need it for future reference. The illustrations & graphics herein are for reference only and subject to change without notice.

iPad®, iPod®, and iPhone® are registered trademarks of Apple Inc.

Bluetooth® is a registered trademark of Bluetooth SIG Inc.

## WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.

 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>WARNING:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

## FCC WARNINGS


**WARNING:** Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Only use attachments/accessories specified by the manufacturer.
- 10) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

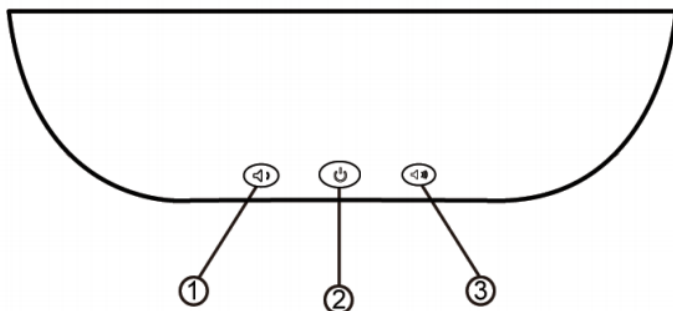

1. Volume –
2. Power/Connect Button
3. Volume +
4. Mini USB Port
5. Auxiliary Input
6. Battery Compartment

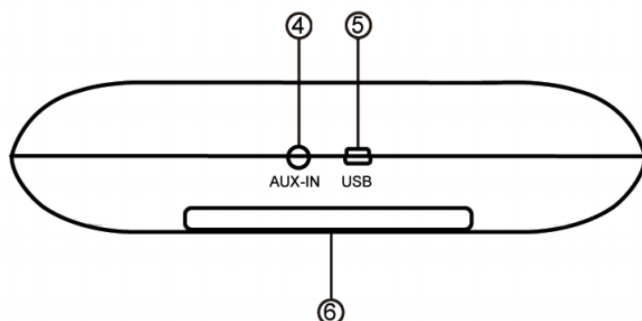

**NOTE:** This unit can be powered by either 4 AAA batteries or via the Mini USB connection.

### **BATTERY INSTALLATION – Batteries not included**

- Open the Battery Compartment **(6)** on the bottom of the unit.
- Insert 4 AAA batteries.
- Close Battery Compartment **(6)**.

#### **IMPORTANT:**

- Be sure that the batteries are installed correctly according to the diagram inside the compartment. The wrong polarity (+ or -) may damage the unit and void the warranty.
- For best performance and longer operating time, we recommend using good quality Super Alkaline type batteries.

#### **CAUTION**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- If the unit is not going to be used for an extended period of time, remove the batteries from the unit.
- Old or leaking batteries can cause damage to the unit and may void the warranty.
- Do not dispose of batteries in fire as batteries may explode or leak.

### **USB CONNECTION**

- Connect the supplied Mini USB cable to an available USB port on a PC.

## **POWER**

- To power the unit ON press the **POWER/CONNECT** button (2) and the blue indicator lights on the buttons will light up.
- To power the unit OFF press the **POWER/CONNECT** button (2) and the blue indicators on the buttons will turn off.

## **VOLUME**

- Adjust the volume using the **VOLUME+** (3) and **VOLUME-** (1) buttons.

## **BLUETOOTH CONNECTION**

- Power the unit ON by pressing the **POWER/CONNECT** button (2). The **POWER/CONNECT** button (2) will begin to flash and the speaker will make a beeping sound to indicate it has entered the Bluetooth “pairing” (connection) mode.
- On your compatible Bluetooth device (smartphone, iPhone®, iPod®, iPad®, etc.), the item will appear in the device list as **100B**. Select “connect” and your device will automatically be paired.
- Once the compatible device pairs with the speaker, the speaker will confirm with another beeping sound.
- After pairing for the first time, the speaker automatically “pair” with the same Bluetooth device. Just select **100B** from the Bluetooth device list on your compatible device and the speaker will automatically be paired.
- **NOTE: Contact the manufacturer of your Bluetooth compatible device or check the manual from your device for instructions on pairing.**

## **AUXILIARY CONNECTION**

- Connect the supplied 3.5mm stereo audio cable from the headphone jack, or other audio output, on your compatible device into the **AUXILIARY INPUT (5)** on the rear of the speaker.
- Adjust the volume control on the connected device to an acceptable level.
- Use the controls of the connected device to control audio playback.
- **NOTE:** When a 3.5mm cable is connected, the Bluetooth® signal will be automatically disconnected and cannot be wirelessly paired while the plug is in the AUX jack. To resume Bluetooth® wireless playback, unplug the audio cable from the **AUXILIARY INPUT (5)** on the back of the unit and “pair” the device again.

## **TROUBLESHOOTING**

Question: Can't pair successfully after multiple connections?

Solution:

- (1) Check if the blue indicator on the buttons lights on, if the indicator goes off, please press the power button, if the blue power indicator doesn't flash, please make sure USB cable is connected tightly or the batteries in the unit are properly working.
- (2) There may be other Bluetooth devices near the speaker causing interference with the connection. Please turn off the Bluetooth function on the other devices you are not using.
- (3) Power off and then power on the unit, to restart the Bluetooth function on the unit or on your Bluetooth device.
- (4) Unplug the AUX cable from the unit, and re-pair the unit and the Bluetooth device.



## **LIMITED 90-DAY WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the unit and all accessories.

During the ninety-day period from the original purchase date, we will service or exchange the unit at no charge. To obtain warranty service or replacement within the ninety-day warranty period, please return the product and all accessories to the original place of purchase.

For technical support, the BLUESTREAM Technical Support Center is available 24-hours a day, 7-days a week for technical assistance or troubleshooting. To contact us by phone, please call 1-800-936-1168.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

## **UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured units, or product sold 'As Is'

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico and grants specific legal rights.