

# BLUESTREAM

## MODEL: BS200AC BLUETOOTH® SPEAKER INSTRUCTION MANUAL



Read these instructions included in this manual thoroughly prior to connecting and operating.

Please retain this manual in case you may need it for future reference. The illustrations & graphics herein are for reference only and subject to change without notice.

iPad®, iPod®, and iPhone® are registered trademarks of Apple Inc.

Bluetooth® is a registered trademark of Bluetooth SIG Inc.

## IMPORTANT SAFETY INSTRUCTIONS



- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.
- 16) CAUTION: Visible and Invisible Laser Radiation when open and interlock defeated.  
DO NOT STARE INTO BEAM.
- 17) Rating label is located at the bottom of enclosure.
- 18) "CAUTION" mark is also located at the bottom of enclosure.

## WARNINGS

- Caution: use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.
- Caution: danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- Warning: to reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- Warning: the batteries shall not be exposed to excessive heat from direct sunlight, fire, or other heat sources.


 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b> <b>WARNING:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	---	---

## FCC WARNINGS

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

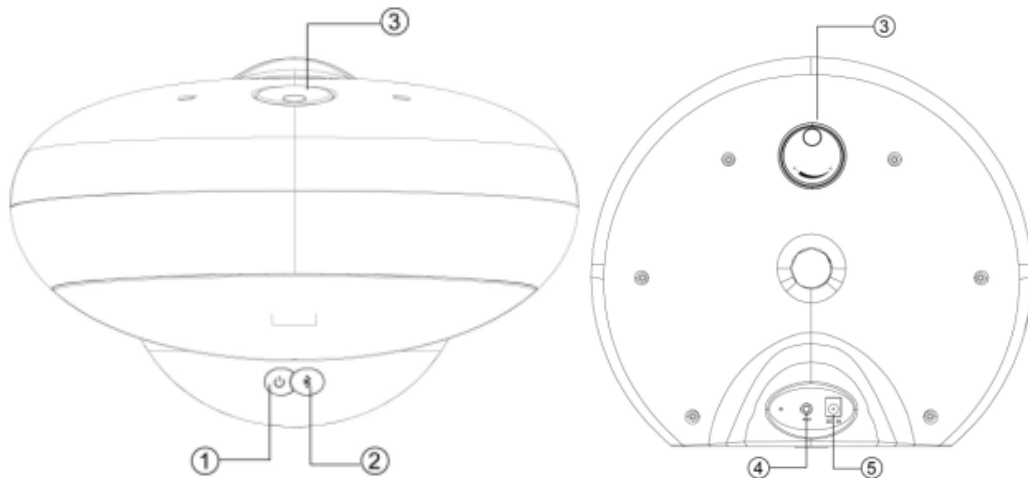

1. **Power/Source** Button
2. **Bluetooth** Button
3. **Volume** Adjustment Wheel
4. **Auxiliary** Input
5. DC Input

**NOTE:** There are two types of methods described in the instructions below for properly using some of the buttons on this model;

- 1) **Press** = When the term “Press” is used with a button operation, it requires you to fully Press and then release the described button to properly activate the described function.
- 2) **Press & Hold** = ‘When the term “Press & Hold” is used, it requires you to fully Press and continue to hold the button in for a two second count before releasing your finger from the button. Only light pressure is needed to hold the button in. Excessive pressure can result in damage to the control buttons.

### **POWER**

- Plug the supplied power adapter into the **DC Input (5)** and a compatible outlet.
- To power the unit ON, Press the **POWER/SOURCE** button (1) and the green indicator in the middle of the **POWER/SOURCE** button will light up.
- To power the unit OFF, Press & Hold the **POWER/SOURCE** button (1) until the green indicator light in the middle of the button turns off.

### **VOLUME**

- Adjust the volume by turning the **VOLUME ADJUSTMENT WHEEL (3)** on the back of the unit.
- To increase the volume, turn the **VOLUME ADJUSTMENT WHEEL (3)** clockwise.
- To decrease the volume, turn the **VOLUME ADJUSTMENT WHEEL (3)** counter-clockwise
- The newer style of volume adjustment wheels allow the wheel to continue to turn even though the maximum/minimum volume level has been reached. This is not a problem with the adjustment wheel.

## **BLUETOOTH CONNECTION**

- Power the unit ON by pressing the **POWER/SOURCE** button (1) and the green indicator in the middle of the **POWER/SOURCE** button will light up.
- After the unit is Power ON, the **BLUETOOTH** button (2) will begin to flash to indicate the unit is in Bluetooth mode.
- If the **BLUETOOTH** button (2) is not flashing, press the **POWER/SOURCE** button (1) again and the **BLUETOOTH** button will (2) flash with a blue light, and the speaker make a beeping sound to indicate the unit has entered Bluetooth mode.
- On your compatible Bluetooth device (smartphone, iPhone®, iPod®, iPad®, etc.), this speaker will appear in the Bluetooth device list as **BS200AC**. Select “connect” and your device will automatically be “paired” (connected to) with the speaker.
- Once the compatible device “pairs” with the speaker, the speaker will confirm connection with another beep sound.
- After pairing for the first time, the speaker automatically “pair” with the same Bluetooth device. Just select **BS200AC** from the Bluetooth device list on your compatible device and the speaker will automatically be paired.
- **NOTE: Contact the manufacturer of your Bluetooth compatible device or check the manual from your device for instructions on pairing.**

## **AUXILIARY CONNECTION**

- Connect the supplied 3.5mm stereo audio cable from the headphone jack, or other audio output, on your compatible device into the **AUXILIARY INPUT (4)** on the rear of the speaker.
- To listen to the **AUXILIARY INPUT (4)** press the **POWER/SOURCE** button (1) until the light in the **BLUETOOTH** button (2) has turned off.
- Adjust the volume control on your connected device to an acceptable level before adjusting the **VOLUME ADJUSTMENT WHEEL (3)**.
- Use the controls of the connected device to control audio playback.
- **NOTE:** When the **AUXILIARY INPUT (4)** mode is selected and, any paired Bluetooth device will automatically be disconnected. To resume Bluetooth wireless playback, press the **POWER/SOURCE** button (1) until the **BLUETOOTH** button (2) flashes, and pair again your Bluetooth device by choosing **BS200AC** from the device list on your Bluetooth compatible device.

## **TROUBLESHOOTING**

Question: Can't pair successfully after multiple connections?

Solution:

- (1) Check to see if the **BLUETOOTH** button (2) is flashing, if the button is not flashing, press the **POWER/SOURCE** button (1) again and the **BLUETOOTH** button (2) will flash.
- (2) There may be other Bluetooth devices near the speaker causing interference with the connection. Please turn off the Bluetooth function on the other devices you are not using.
- (3) Power OFF and then power ON the speaker using the **POWER/SOURCE** button (1) to restart the Bluetooth function on the speaker or on your Bluetooth device.
- (4) Unplug the AUX cable from the **AUXILIARY INPUT (4)**, and pair the unit and the Bluetooth device again.



## **LIMITED 90-DAY WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the unit and all accessories.

During the ninety-day period from the original purchase date, we will service or exchange the unit at no charge. To obtain warranty service or replacement within the ninety-day warranty period, please return the product and all accessories to the original place of purchase.

For technical support, the BLUESTREAM Technical Support Center is available 24-hours a day, 7-days a week for technical assistance or troubleshooting. To contact us by phone, please call 1-800-936-1168.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

## **UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured units, or product sold 'As Is'

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico and grants specific legal rights.