



Models 215/415/418/818

Digital MP3 & Video Player

Table of Contents:

Product Overview	2
Features & Notes.....	2
Charging	2
Button Overview.....	3
Button Descriptions.....	3
Mini SD Card.....	3
Loading music, pictures, videos, or eBooks	4

Playing Music.....	5
Play Modes.....	5
Volume.....	5
Playing Video.....	5
Deleting Videos.....	5
Volume.....	5
Viewing	
Photos.....	6
Auto Play Time	6
FM Radio.....	6
FM Options	6
Volume.....	6
Voice Recorder.....	7
How to Save a Recording.....	7
Recording Quality.....	7
How to Save Recordings.....	7
How to Access Recordings.....	7
eBook Viewer.....	7
Auto Play Time.....	8
File List.....	8
Setup Menu.....	8
Specifications.....	9
Video Conversion Utility.....	9 & 10
Warranty.....	11

Features:

 
- Color display
- Digital MP3 player supports MP3, WMA, & WAV
- Supported video format: AVI
- FM Tuner (models: FL418 & FL818)
- Supports JPEG picture browsing
- ID3 TAG support (title, artist, and lyrics)
- Firmware upgradeable
- Built-in rechargeable Lithium-ion battery
- USB 2.0
- Micro SD Card Slot (models: FL418 & FL818)
- This player will recognize up to 9 folders [folders must be created on a PC or laptop].
- This player can be used without power as a USB flash drive.

Notes:

- Do not expose unit to extremely hot, cold, or humid environments.
- Battery life may vary under different usage conditions.
- This unit charges via USB Mini (B) connection.
- Do not disconnect the unit while formatting or transferring music.
- Do not disassemble this unit.
- Always use "FAT32" as the file system when formatting this unit.


Charging.

- Always fully charge this unit before the first use.
- A full charge takes 3 – 4 hours.
- Battery charging icon shows remaining power at 4 different levels.
 - Solid Icon = Battery is fully charged
 - Blank Icon = Battery is fully depleted and needs to be recharged to continue operation
- Your PC or laptop **must** be on while charging.
- The MP3 player can be on or off while charging.
- The rechargeable battery may be low if:
 1. The battery indicator shows low
 2. The player automatically turns off after reboot
 3. The keys become inactive

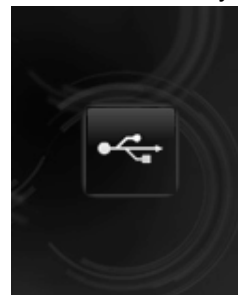

This screen should appear when the MP3 player is connected to a computer. (NOTE*** PC or laptop must be on to charge)

 Button Overview:

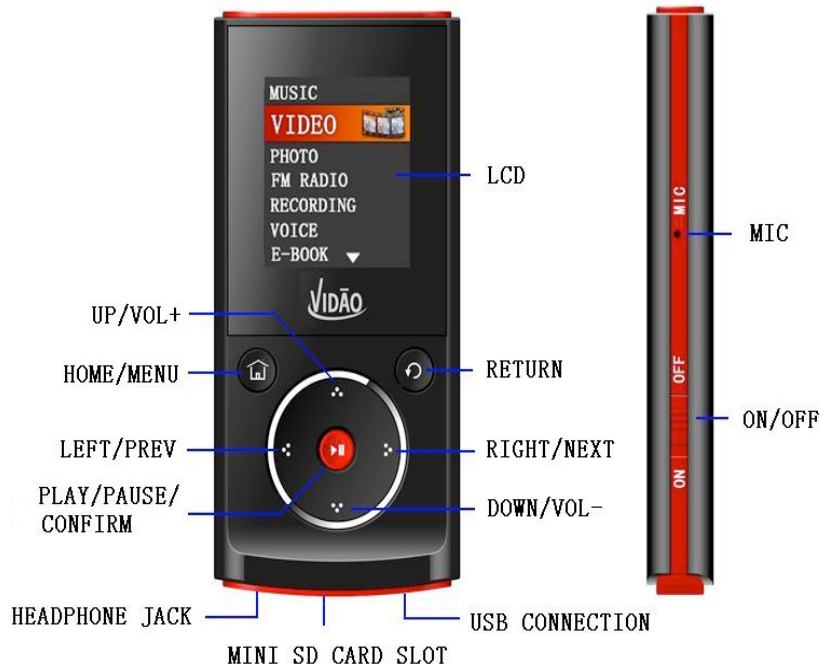

Mini SD Card:

Insert Mini SD Card. Enter any directory (video, photo, text) and the device displays two drives: "Internal Memory" or "SD CARD". Press **UP [▲]** or **DOWN [▼]** to highlight "Internal Memory" or "D:SD CARD", then press **PLAY [▶II]** to enter.

Button Descriptions:

- **ON/OFF:** Power switch

- **PLAY / PAUSE/ CONFIRM:**

1. Long press to power on/off. ***NOTE: ON/OFF switch must be set to "ON" in order for the unit to turn on.

2. Short press toggle play / pause.

- **HOME/MENU:**

1. Short press to access main menu.

2. Short press to show submenu.

- **UP/VOL+:**

Short press to increase volume in play mode or move cursor up in other modes.

- **DOWN/VOL-:**

Short press to decrease volume in play mode or move cursor down in other modes.

- **RIGHT/NEXT:**

Short press to play next song in play mode or move right in other modes.

- **LEFT/PREV:**

Short press to play last song in play mode or move left in other modes.

RETURN: Short press to jump back a screen.

MIC: Built-in microphone

USB: USB connection port

 
Mini SD Card Slot: Expands the memory capability.

Headphone Jack: Standard headphone jack


Loading music, pictures, videos or eBooks to the MP3 player.

NOTE: This MP3 player is only compatible on PC's and laptops running Windows 2000 or newer. This unit will **not** work with Apple operating systems.

1. Connect the MP3 player to your PC or laptop with provided mini USB (B) cable. Windows should detect, install, and auto play the device.

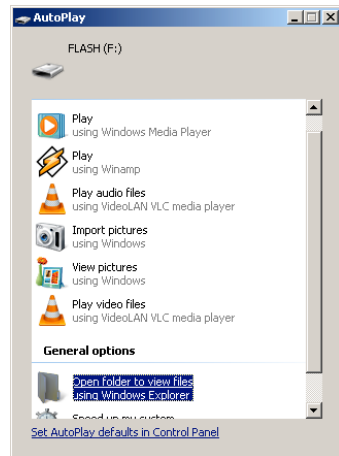

 
2. Under **General Options** select “Open folder to view files using Windows Explorer”. This will open the MP3 player's FLASH drive (F:).

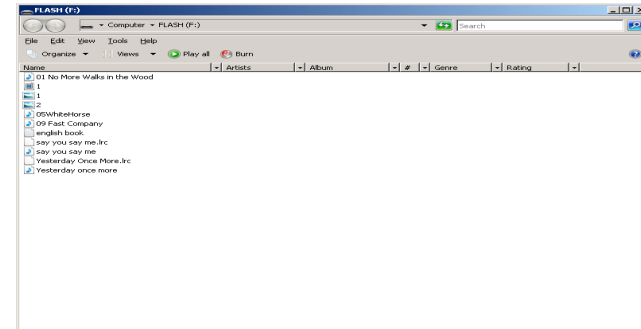

(MP3 Player's FLASH drive (F:))


*** NOTE: If Windows doesn't run auto detect, click on “My Computer” and select FLASH drive (F:).

 3. Open the folder that contains the music, pictures, videos, or eBooks that you want to load on the MP3 player.
4. Drag and drop the file(s) from your PC to the MP3 player's FLASH drive (F:).

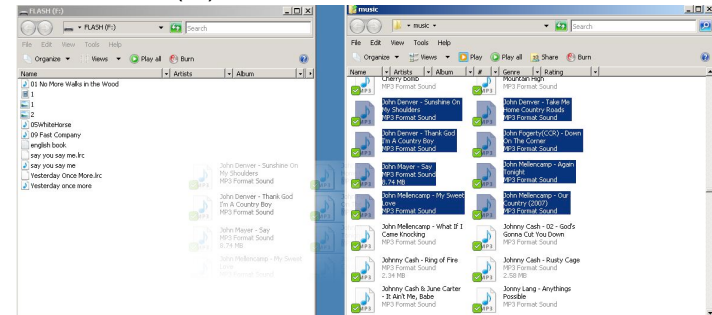


You can also highlight a selection of files, right click, and select “Copy”. Next, right click on FLASH drive (F:) and select “Paste”. This will also transfer files from your computer to the MP3 player.

 Playing Music.

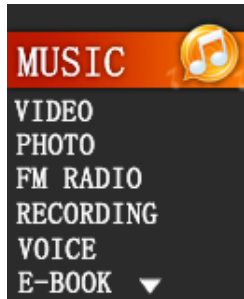

Press [▲] or [▼] to highlight **MUSIC**, then press [►II].
Press **PLAY** [►II] to enter the **All Music** menu.
Press [▲] or [▼] to highlight desired track, then press [►II].

 Music Screen

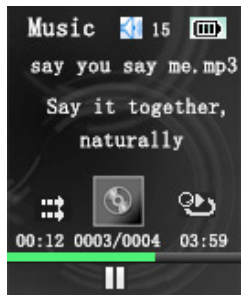


Volume Control:

Press [▲] or [▼] while in the music screen to increase or decrease the volume.

Play Modes:


Press **HOME** [Home icon] while on the **Music** screen to access repeat mode, play mode, and equalizer options.

 Playing Video.

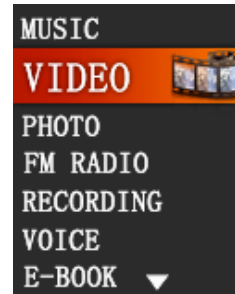

Press [▲] or [▼] to highlight **VIDEO**, then press [►II].
Press [▲] or [▼] to highlight desired video, then press [►II].

 Play Video Screen

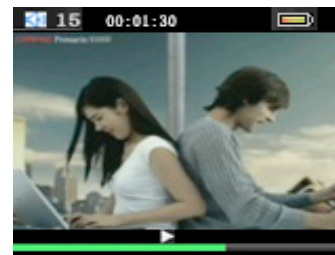

Volume Control:

Press [▲] or [▼] while in the video screen to increase or decrease the volume.

Deleting Videos:

Press [▲] or [▼] highlight the video you want to delete, then press **HOME** [Home icon] to delete.

***NOTE: This device will only play AVI video.

Viewing Photos.



Press [▲] or [▼] to highlight **PHOTO**, then press [►II].
Press **PLAY** [►II] to enter the **PHOTO** menu.
Press [▲] or [▼] to highlight desired picture, then press [►II] to view.

Press **HOME**  while viewing a picture to access Auto Play Times.

FM Radio.



Press [▲] or [▼] to highlight **FM RADIO**, then press [►II] to activate FM radio.

FM Radio Screen



 
Volume Control:

Press [▲] or [▼] while in the FM Radio screen to increase or decrease the volume.

FM Options:

Press **HOME**  while on the **FM Radio** screen to access auto/manual scan, memorize, and preset options.

Voice Recorder.

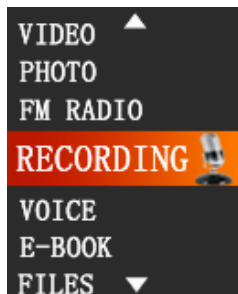

Press [▲] or [▼] to highlight **RECORDING**, then press [►II].

Voice Recorder Screen



Press [►II] to start or pause recording.

 
How to save a Recording:

Press **RETURN**  to save your recording.

Recording Quality:

Press **HOME**  to change recording quality.


How to Access Voice Recordings:

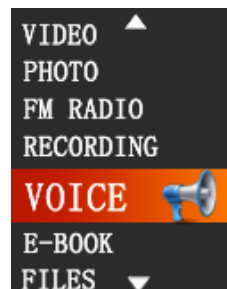

All recordings automatically save to the **VOICE** directory.


Press [▲] or [▼] to highlight **VOICE**, then press [►II] to access your recordings.

 eBooks

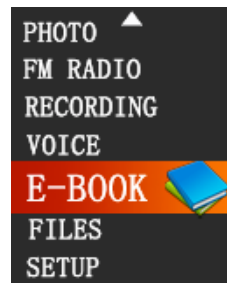

Press [▲] or [▼] to highlight **E BOOK**, then press [►II].

 eBook Screen

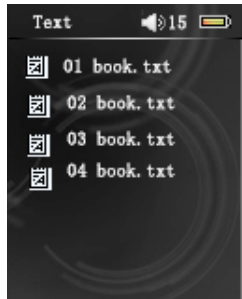


Press [▲] or [▼] to highlight desired eBook, then press [►II] to start reading.

Auto Play Time

Press **HOME**  to change auto play time.

File List.

 The **FILES** screen displays all saved files in 1 directory.

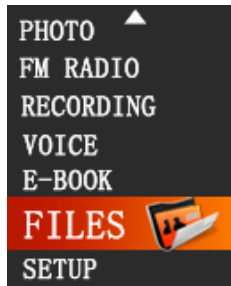


Press [▲] or [▼] to highlight **FILES**, then press [►II].

Press [▲] or [▼] to highlight desired file, then press [►II] to open.

Setup Menu.

 From the **SETUP** screen you can access all submenus and settings.

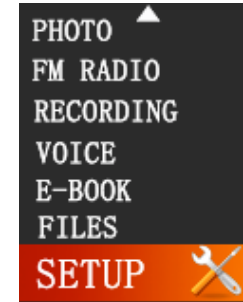

Press [▲] or [▼] to highlight **SETUP**, then press [►II].

Music – Repeat Mode, Play Mode, Equalizer Options

Record Settings – Change Recording Quality

Text Settings – Auto Play Time

Radio – Stereo Switch, FM Region

Picture Settings – Auto Play Time

Display – Back Light Time, Brightness, Backlight Mode

Sleep – Change Sleep Time

Languages – Change Menu Language

System – About, Firmware Upgrade, Default Set

SPECIFICATIONS

Size:	3.7" x 1.7" x .5"
High speed USB 2.0	(up to 5Mb/s)
Average battery time:	MP3 = 16 hours Video play = 4 hours
MP3 Bit rate:	8K bps – 320K bps
WMA:	5K bps – 384K bps
Frequency Response:	20Hz to 20KHz
SNR:	85dB
Distortion:	<0.1%
Supported Music Formats:	MP3, WMA,
Operate Temperature:	41°F to 104°F
Supported Systems:	Windows 2K / XP / VISTA / 7

Video File Conversion Utility.

Before any Video files can be loaded on this player, you must first convert the video files into the proper AVI format and size using the “Video File Conversion Utility” program we have pre-loaded into the flash memory of this player. Before this Video Utility can be used, it must be installed on your PC by using the following instructions;

 
1. Connect the Player to your PC with the included USB Charging and Transfer Cable.
2. Once your PC has identified there is a USB storage device connected, it will ask if you want to view the contents of the newly connected storage device. Indicate “Yes” to view the contents of the flash memory device
3. The Video File Conversion Utility is located in the root menu of the player.

4. In the MP3 Player directory, double-click on the Video File Conversion Utility file and a window will pop up and ask you if you want to install this program onto your PC. Click on “Yes” and make the destination of this program in your Documents folder or on your Desktop for easy access.
5. Once installation is complete (which may take 2-5 minutes) you are now ready to follow the instructions below for easily converting most video file formats to properly play on this device.

Converting a Video File

AVI is one of the most popular video formats in portable media and is also a very compact format making the best use of valuable player memory space.

A). Open the “AVI CONVERTER” utility program and the screen below will appear.

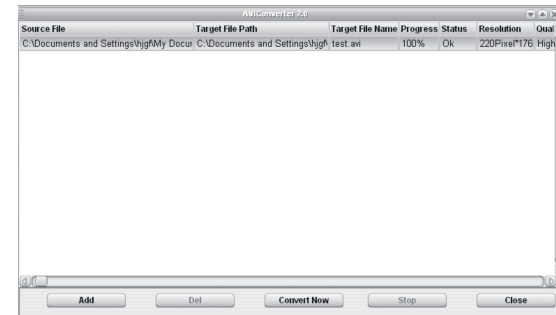



B) Select the **ADD** button to begin the process of converting a video file and the screen below on the left will appear.

C) Set the resolution in the upper box to: **220 Pixels by 176 Pixels**

C) Select the Source file. This is the location of the Video File on your PC or other connected device that you want to convert. Click the right-side of this box to access the drop-down menu and easily locate the video file to convert.

D) Select the Target File Path. This is the location you want to the converted video file to be placed. This location can be anywhere on your PC. Click the right-side of this box to access the drop-down menu to easily chose the destination for this converted video file.

  E) Target File Name: This is the name you want to assign to this converted video file.

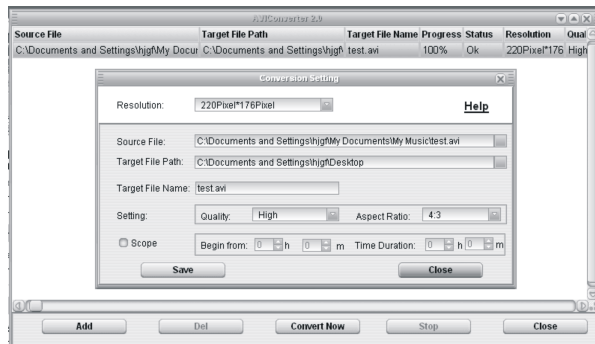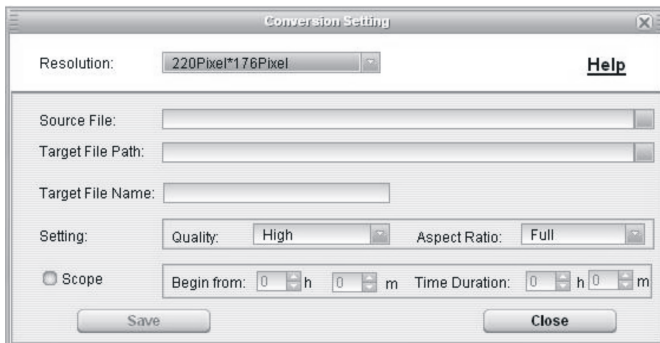

F). Select the recommended conversion Settings for Quality: **High** and Aspect Ratio: **Full**.

G). After all of the above settings are made for a video file ('Scope' is not a required setting), press the SAVE button and continue to add another video file to convert or you can press "**END**" to return to the previous interface.

H) Click on "**Convert Now**" to begin the conversion process. When the progress for each video file reaches 100%, the screen will show if the file has been successfully converted.

I) Once the video file is successfully converted, it can now be moved into the MP3 player using the Drag & Drop method.

Troubleshooting:

Newly added music titles are not visible in the "All Music" list;
Scroll to the main MUSIC function, press enter, scroll to highlight "Media Update" and press enter and all the music titles will now be visible.:



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized VIDAO dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-998-4326.

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD & CD discs, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall VIDAO be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL VIDAO BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.